


IN CASE OF	Use a duffel bag brigh or neon in color, as thi may also help emergency personnel case of an accident. Write "EMERGENCY" o it so it stands out.
7 10 7 1000000	HINT: It would be best for you to create an emergency bag to keep in your car at all times.
Keep an emergency contact on the ir cellphone is damaged in an accident family's information in a hidden area.	. It would also be wise to keep your
If your cellphone is damaged or has s change will allow you to make a call a	
	at a payphone.
change will allow you to make a call a Keep a copy of your car and health ir	at a payphone.
change will allow you to make a call a Keep a copy of your car and health ir or in an emergency bag.	nsurance inside of your glove box,









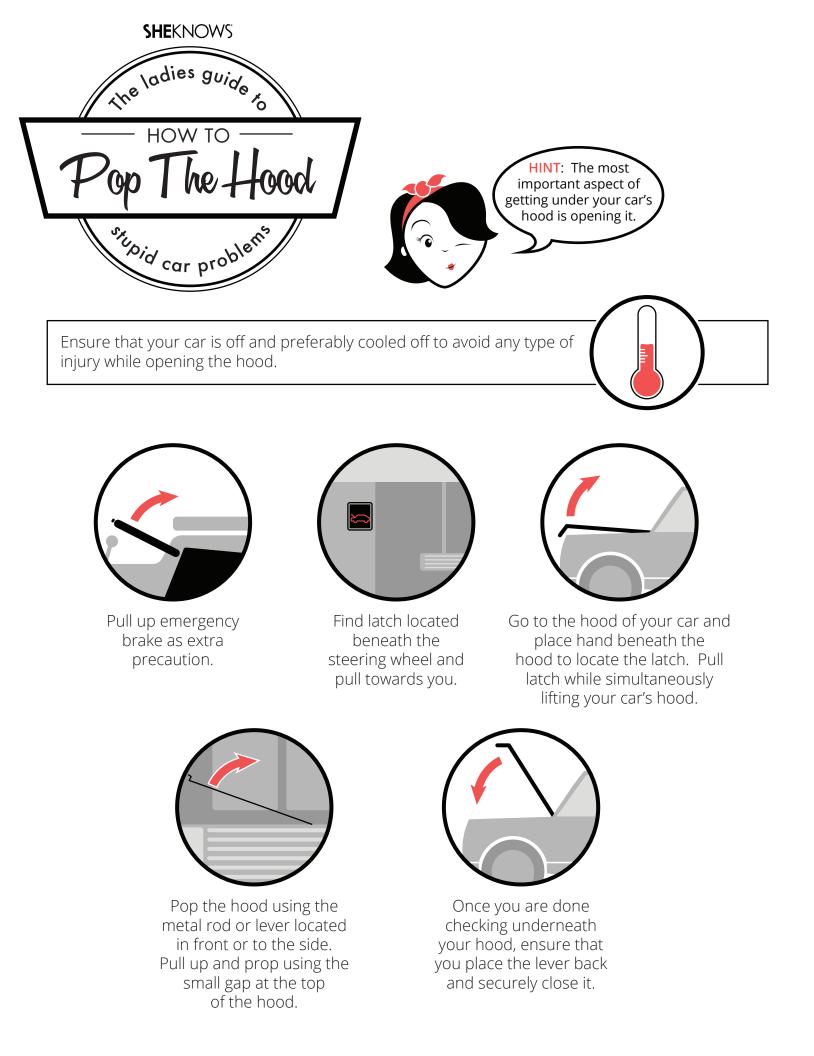

Pop your hood and look to see if everything is in place. Refer to your Owner's Manual for a good visualization of what you should be seeing.

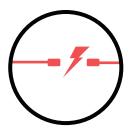


If the connection between your battery and starter is faulty or broken, it will cause your car not to start. When doing a visual check, also look at these wires to ensure that it is working. You can also utilize a circuit tester when the car is on to see if there is any movement.

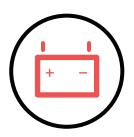

The most common reason for a car not starting is due to the battery. Clean the battery if it looks to be corroded. If you think it may be dead, jump start it utilizing jumper cables. If it starts, take the car to a mechanic for a diagnostic test.



Most cars should give you some type of warning light if your battery goes dead. If there isn't one, it could be your ignition switch.

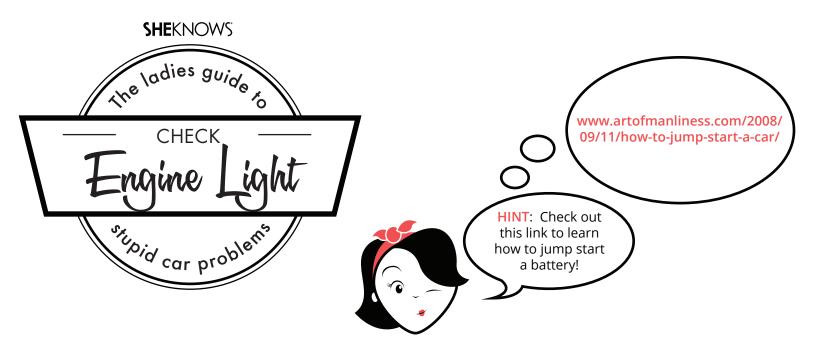



Some cars are scheduled to turn on the "Check Engine" light when it is time for a routine maintenance. If this is the case, check to see if it is time for an oil change or maintenance appointment. If you just had one and the mechanic did not reset it, you can check your manual on how to do so yourself.



Believe it or not, your check engine light will come on if your gas cap is not on or screwed on tightly. Check both to see if this cause the light to turn off.



Newer modeled cars do not need spark plugs replaced for at least 100,000 miles. But this is not to say that something cannot go wrong with them beforehand. Check your owner's manual for both location and signs of faulty plugs. Replace the spark plugs immediately if there is a problem.



Your car's computer is wired to warn you when there is a potential problem. Check to see if your battery needs to be replaced.

	SHEKNOWS the ladies guide to	
	ENGINE	7
_	Stoid car problems	

HINT: There are few problems that may cause your engine to hesitate when starting. Your best bet is to go down the list and pinpoint the problem to fix it yourself or schedule an appointment to get it done.

A dirty air filter can cause your engine to hesitate when starting. Lift it out of its place under the hood and check for dirt. Lift towards the sun, if you can see through it, it's clean. If not, it may be best to replace it.



Check to ensure that the fuel injector is placed properly. If so, listen for any type of clunking or irregular sounds. If so, make an appointment with your mechanic to replace or fix.




Refer to your Owner's Manual to locate the fuel pump fuse. If it is not functioning properly or not tightly in place, this may be the source of your problem. If it is, move on to the voltage of the pump. Have someone rev your engine when the car is on to see if the needle moves. If not, there is your answer. If so, move on to clogging in the filter.





If the valves are not in prace properly, this could also be the source of your problem. Check the placement and that they are as tight as they need to be.




If your car is hesitating when starting, it could be a sign of a dying battery or faulty alternator. Look for signs of both by paying attention to the radio not working, dim lights or a warning light.

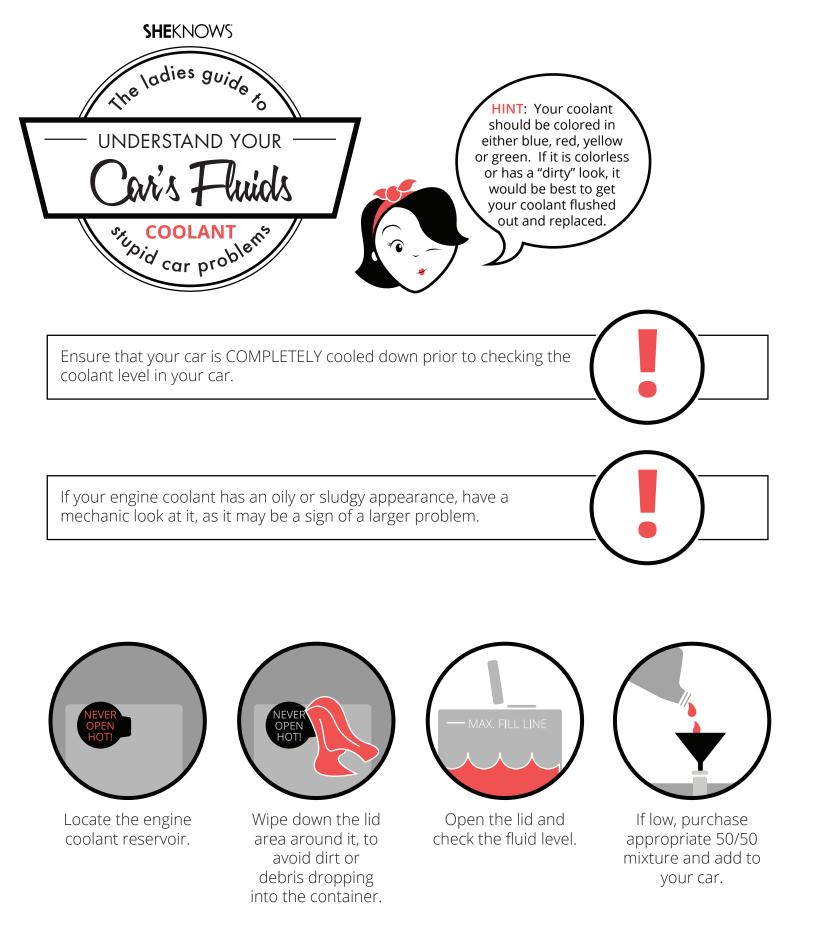

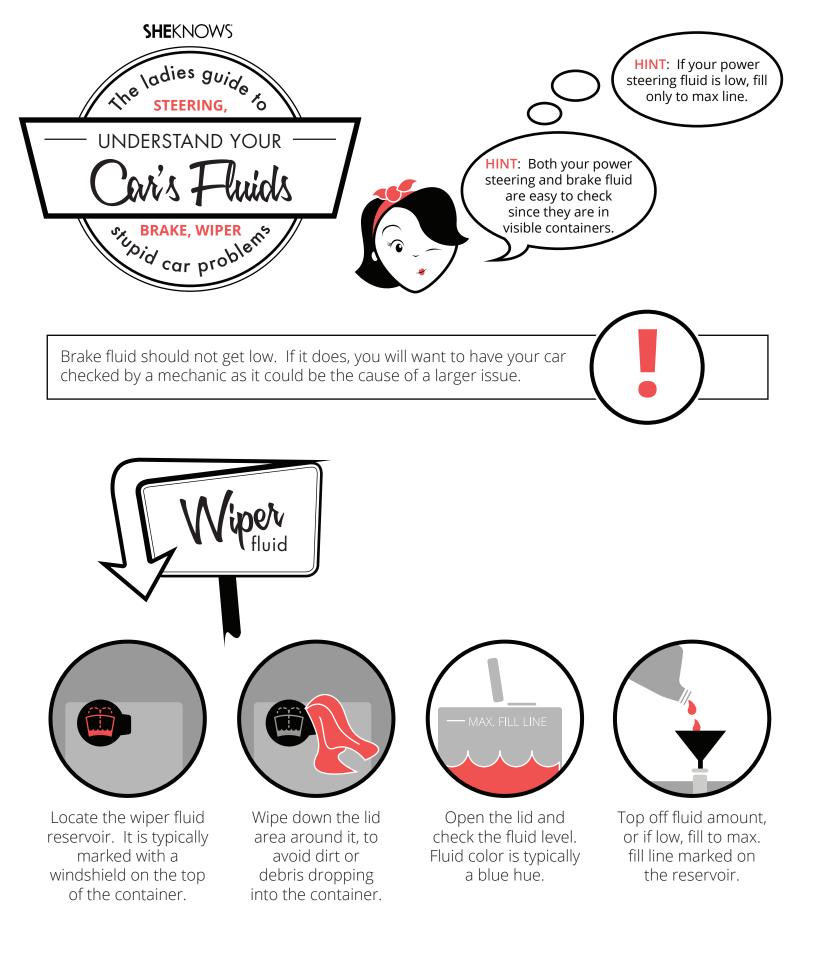

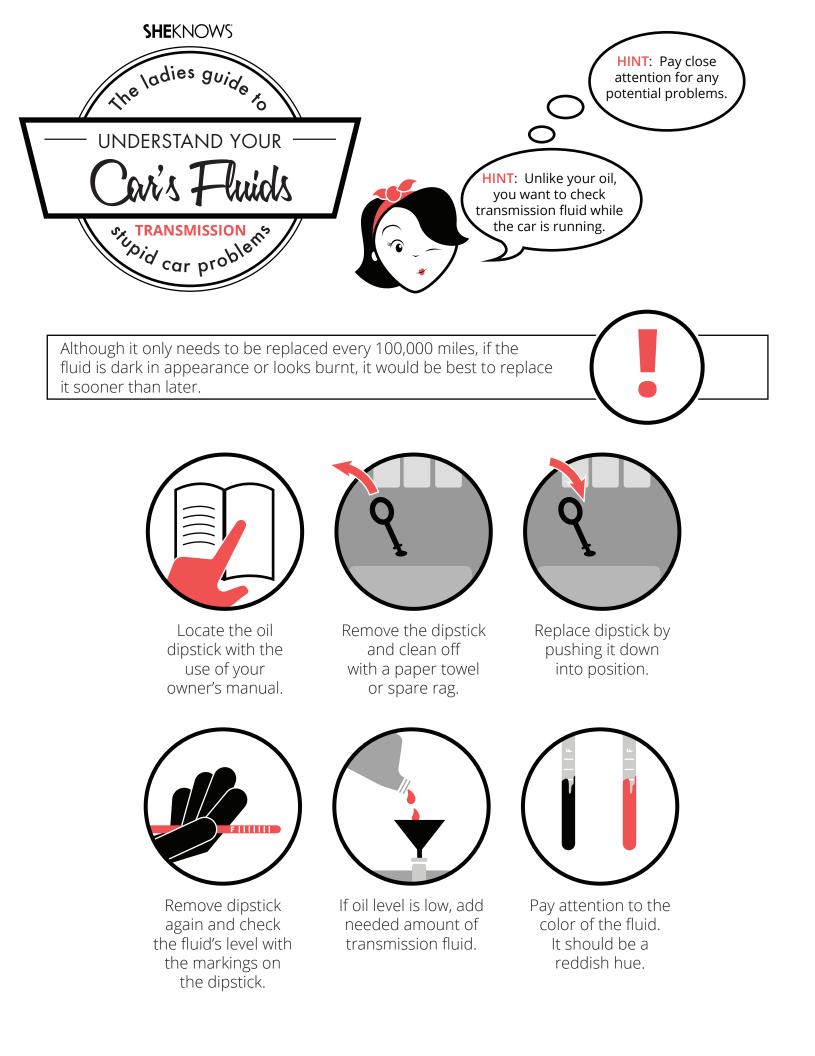



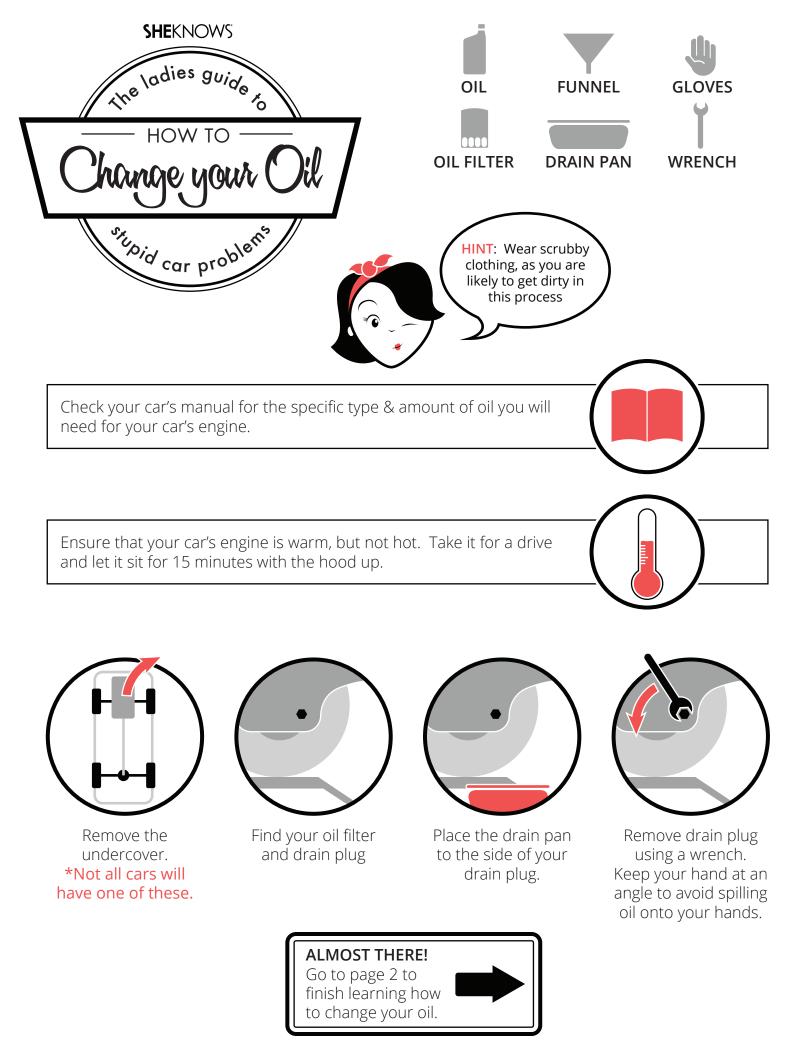




waste area.

than the recommended amount.

for 30 seconds.

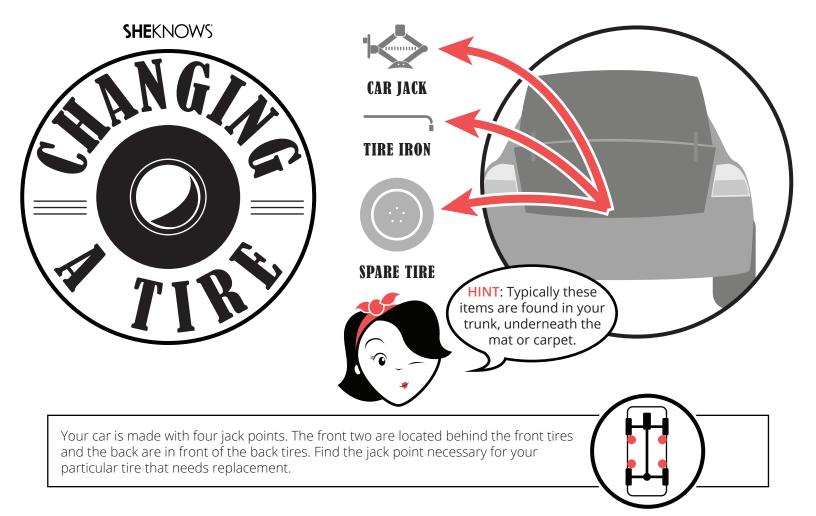




Prior to raising the car, loosen each lug nut with the tire iron. Do not remove, just loosen.




Slowly lower car by turning jack counterclockwise.

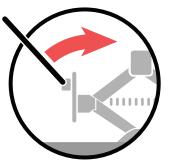

Locate and place car jack into the jack point groove. Slowly raise by turning lever clockwise.




Tighten lug nuts with tire iron in a star pattern.

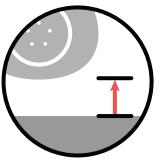

Once the car is raised to desired height, remove the lug nuts completely & pull tire towards yourself.



Replace equipment back into the trunk, as your tire may be fixable.

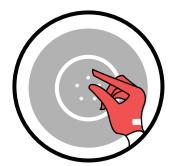

Add new tire on and finger tighten lug nuts.



WARNING: Do not drive faster than 35 - 40 mph when on a spare donut, as it could easily blow out.